



Asus A52F XE2 Battery Replacement

Replace the battery of the Asus A52F XE2.

Written By: Morgan Hays



INTRODUCTION

Battery life of any device will eventually shorten over time. This guide will show you how to replace the battery of the Asus A52F XE2.

Step 1 — Battery



- Place the laptop face down with the battery facing away from you.
- Locate the two buttons next to the battery.
- Slide the right slider to the unlocked (red) position.

Step 2



- Hold the left button to the left.
- Slide the battery with your other hand away from you and it should disconnect.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-07 05:09:39 PM.